

---

figure 1


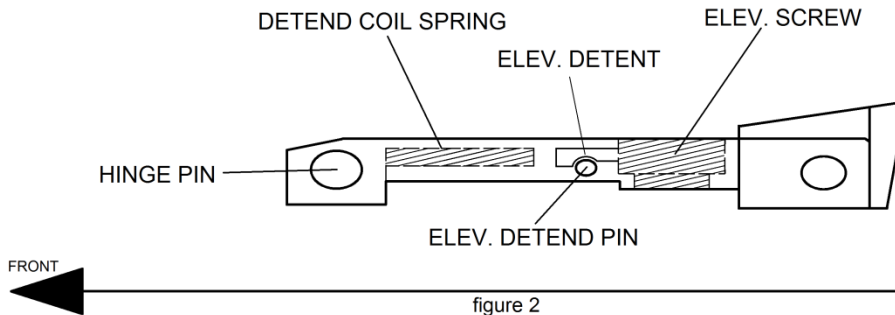


figure 2

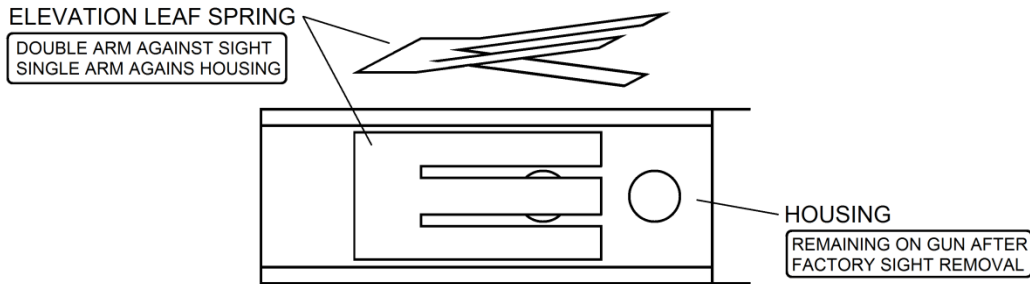

---

## Buckmark Long – Instructions

**!!!ENSURE FIREARM IS UNLOADED BEFORE PERFORMING ANY MAINTENANCE!!!**

**Front Sight** – Remove factory sight. Replace with Firesight Front using factory mounting screw and factory guide pin.

**Rear Sight** - Remove hinge pin with a small punch. With gun in the upright position remove the elevation screw and lift off the top sight assembly (figure 1). \*Note the elevation leaf spring positioning in the bottom sight assembly (figure 2). Carefully pry out detent coil spring then remove elevation detent pin using a small punch along with elevation detent (figure 1).

**Rear Firesight Assembly** – Install elevation detent and detent pin. Compress detent coil spring in slot behind elevation detent. Lay elevation leaf spring into sight housing single arm down (arms toward rear of pistol; figure 2). Lay rear top sight assembly over elevation leaf spring and start elevation screw but do not tighten. Install hinge pin and screw down elevation screw to desired height.